



ASSEMBLY AND OPERATION INSTRUCTIONS FOR M37469 "CHOPPING BROCK"


STEP 1: LAY OUT ALL THE PARTS OF THE ITEM AS SHOWN BELOW. FOLLOW THE ARROWS IN BUILDING THE STRUCTURE FROM THE GROUND UP.

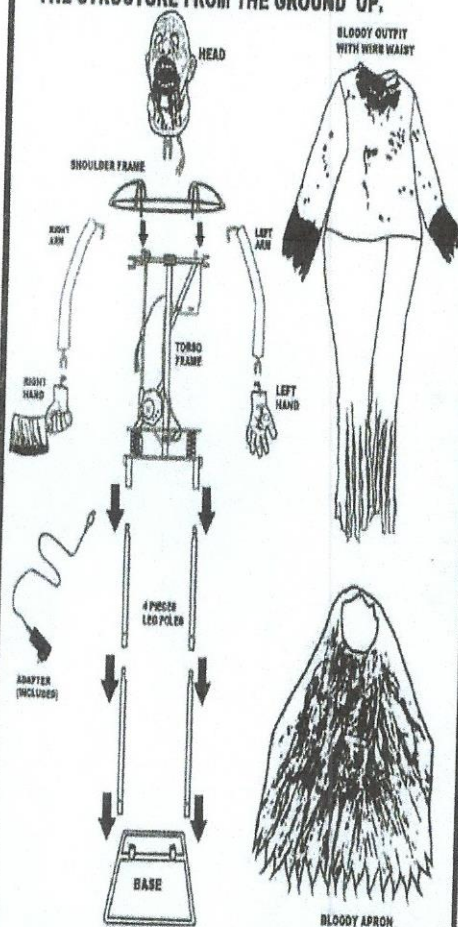

STEP 2: ONCE THE BASE, LEGS, TORSO AND SHOULDERS ARE CONNECTED, SLIP ON THE BLOODY OUTFIT WITH WIRE WAIST OVER THE STRUCTURE. MAKE SURE TO FIX THE SHAPE OF THE WIRE WAIST IBACK ITS ORIGINAL ROUND SHAPE. THEN DRAPE THE BLOODY APRON OVER THE BLOODY OUTFIT.

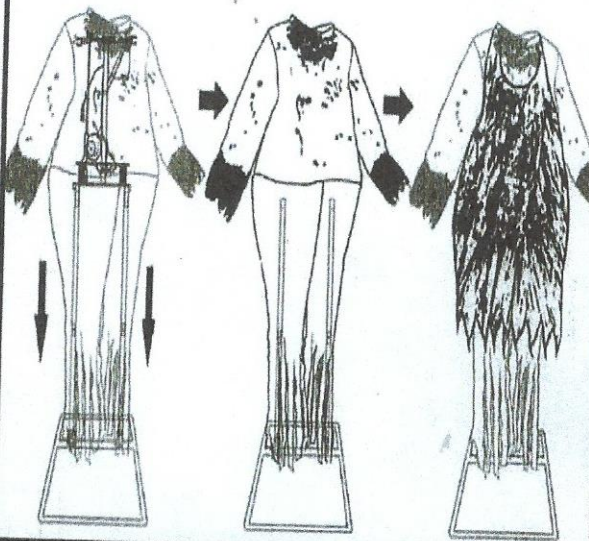

STEP 3: SLIDE THE ARM FRAMES UP THE SLEEVES AND CONNECT THEM TO THE SHOULDER AREA AS SHOWN BELOW. YOU MAY NEED TO OPEN THE BACK OF THE BLOODY OUTFIT TO MAKE ACCESS EASIER.

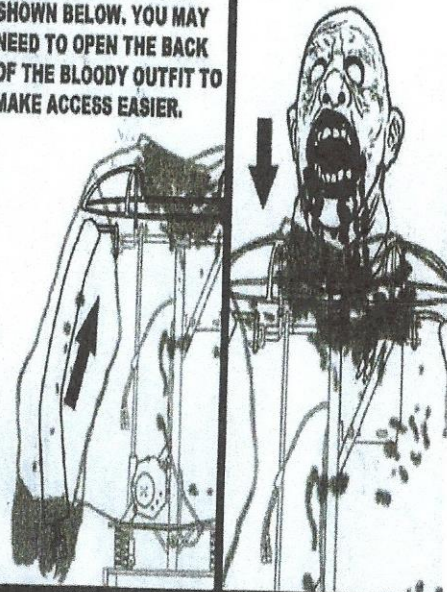

STEP 4: ATTACH THE HEAD TO THE STRUCTURE AS SHOWN BELOW.

STEP 5: CONNECT THE JACKS HANGING FROM THE HEAD TO THE MATCHING COLORED PLUGS COMING FROM THE TORSO FRAME. CONNECT THE ADAPTER AS SHOWN IN THE CONTROL PANEL CLOSE UP AND LET IT RUN DOWN THE BACK OF THE BLOODY OUTFIT.

SENSOR IS LOCATED FRONT CENTER OF NECK.

IMPORTANT REMINDER: DO NOT PLUG THE ITEM INTO A POWER SUPPLY UNTIL ASSEMBLY IS COMPLETE!

STEP 6: FINALLY, ATTACH THE LEFT AND RIGHT HANDS TO THE WRIST SLOTS ON THE END OF EACH ARM FRAME.

MORBID
ENTERTAINMENT
www.morbidenterprises.com

CHOPPING BROCK IS SENSOR ACTIVATED.

