



# INSTRUCTION SHEET ( ASSEMBLY AND OPERATING GUIDE ) FOR M38236


## LIST OF THE PARTS:

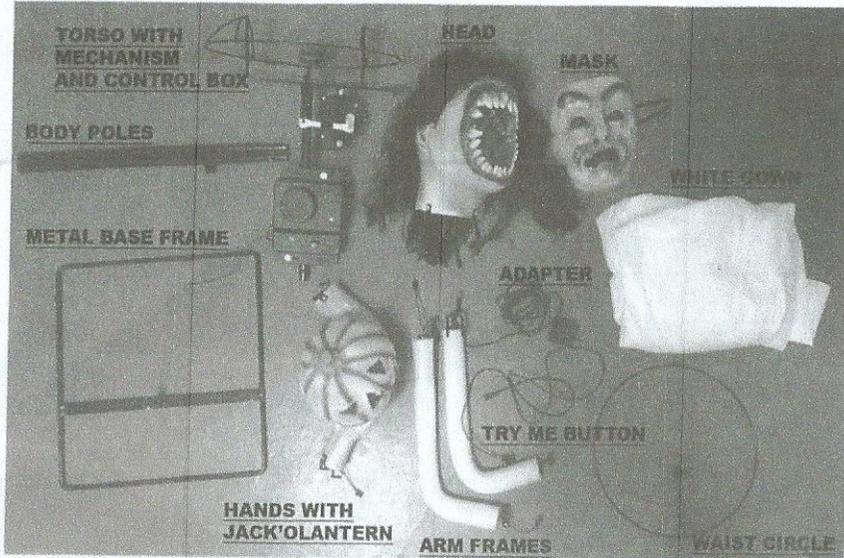

**STEP 1: CONNECT THE 2 BODY POLES TO THE METAL BASE FRAME AS SHOWN IN THE IMAGE BELOW:**

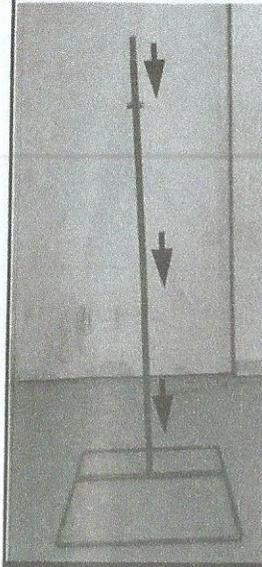


**STEP 2: NOW YOU CONNECT THE TORSO PART AND WAIST CIRCLE TO THE ASSEMBLED STRUCTURE:**

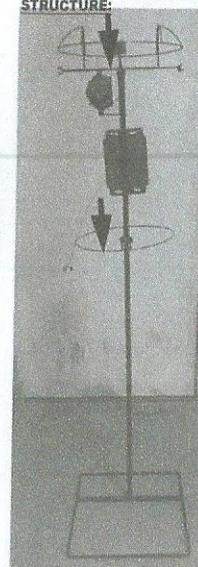


**STEP 3: THEN DRAPE THE DRESS OVER AND DOWN THE ASSEMBLED STRUCTURE LIKE BELOW:**




**STEP FOUR: NOW FOR THE ARMS. SLIDE THE LEFT AND RIGHT ARM FRAMES UP AND THROUGH THE SLEEVES. WHEN THEY ARE THROUGH THE TOP OF THE SLEEVES CONNECT THE ARM FRAME PRONGS TO THE METAL SLOTS ON THE SHOULDER.**

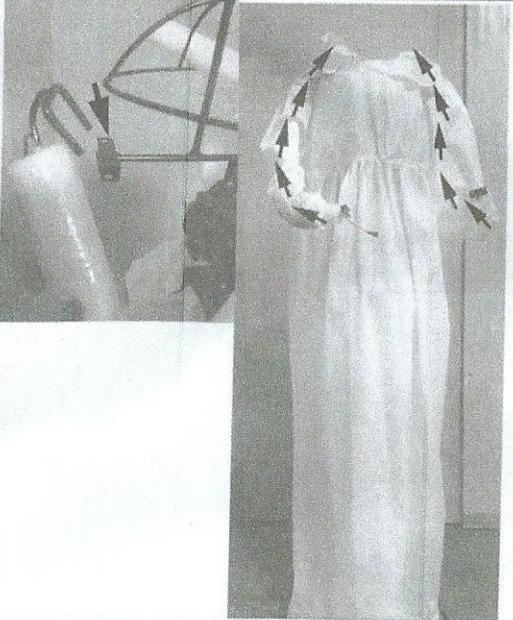


**STEP 5: GO BEHIND THE DRESS, THROUGH THE SLIT AT THE BACK YOU WILL SEE A GREEN WIRE FROM THE CONTROL BOX AND A GREEN WIRE FROM THE TOP OF THE RIGHT ARM FRAME. CONNECT THESE TWO WIRES LIKE IN THE IMAGE BELOW:**

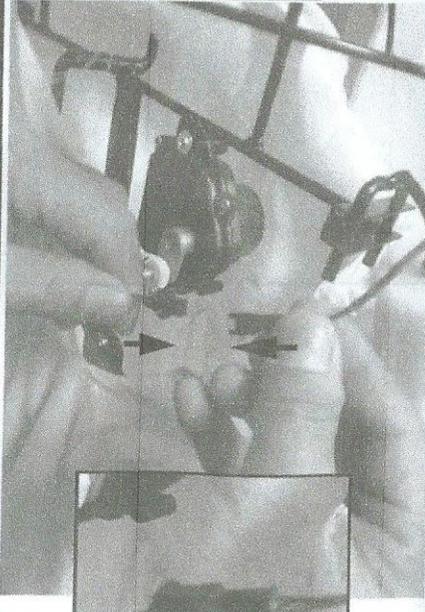

**STEP 6: NOW CONNECT THE HEAD BY SLIDING IT DOWN INTO THE METAL SLOTS ON THE NECK AREA OF THE ASSEMBLED FRAME.**

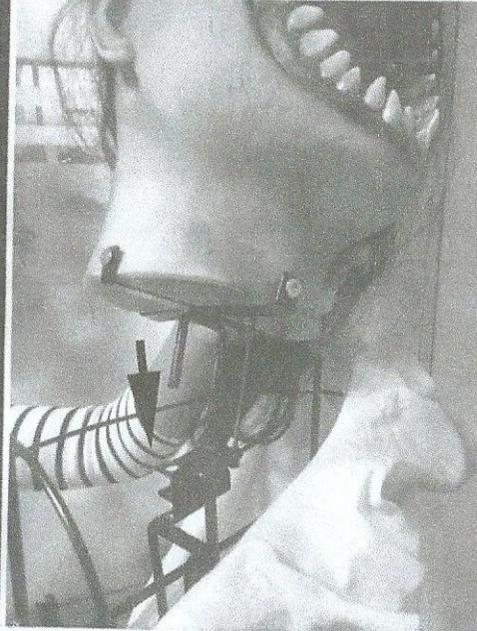

**STEP 7: YOU WILL SEE A RED WIRE FROM UNDER THE NECK OF THE HEAD. TAKE THIS AND CONNECT IT WITH THE RED WIRE THAT IS COMING FROM THE TORSO CONTROL BOX.**

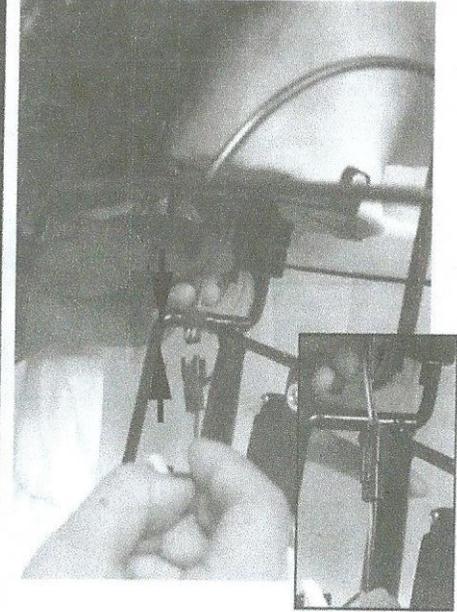


**STEP 8: AT THIS STAGE YOUR ITEM SHOULD LOOK LIKE THIS. NOW GO BEHIND IT AND CLOSE THE BACK SLIT USING THE VELCRO PATCHES ON THE SIDES OF THE SLIT.**



**STEP 9: NOW YOU TAKE THE HANDS WITH JACK'OLANTERN PIECE. CONNECT THE RIGHT HAND FIRST. SLIDE THE PRONGS DOWN INTO THE METAL SLOTS ON THE WRIST AREA. THEN YOU NEED TO CONNECT THE WIRE FROM THE WRIST AREA TO THE WIRE FROM THE RIGHT HAND. THEN GENTLY SLIDE THE RIGHT SLEEVE OVER THE WRIST AREA TO CONCEAL THE WIRES.**



**STEP 10: NOW YOU CONNECT THE LEFT HAND TO THE LEFT ARM FRAME. AFTER THAT YOU NEED TO GENTLY SLIDE THE SLEEVE OVER THE WRIST.**

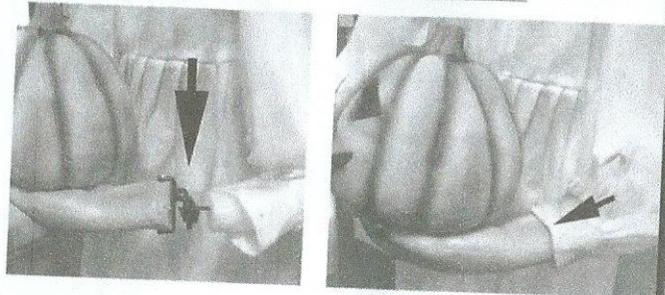

**STEP 11: IT'S TIME TO PUT HER MASK ON HER HEAD. YOU CAN CHOOSE TO DISPLAY HER WITH OR WITHOUT HER MASK ON.**



**STEP 12: NOW GO BEHIND THE ITEM AND LIFT UP HER DRESS TO GAIN ACCESS TO THE CONTROL BOX. FIRST PLUG IN THE PROVIDED ADAPTER INTO THE HOLE AS SHOWN BELOW. THEN PLUG IN THE PROVIDED TRY ME BUTTON INTO THE HOLE AS SHOWN BELOW.**



**NOTE: LET THE ADAPTER HANG UNTIL THE FLOOR AND EXIT FROM THE BOTTOM OF HER DRESS.**

**NOTE: SHOULD YOU WANT TO USE A STEP PAD TO ACTIVATE THE ITEM, YOU CAN PLUG THE STEP PAD INTO THE SAME HOLE THAT YOU PLUG THE TRY ME BUTTON INTO. \*step pad not provided with this item**


**STEP 13: AFTER PLUGGING IN THE TRY ME BUTTON, YOU NEED TO SLIDE THE TRY ME BUTTON INTO AND UP THE LEFT SLEEVE TO EXIT AND DANGLE FROM THE LEFT WRIST AREA.**



**YOUR ITEM IS NOW READY FOR DISPLAY! PLEASE REFER TO CONTROL BOX GUIDE BELOW FOR OPERATING INSTRUCTIONS.**

**TURNING THE VOLUME CONTROL KNOB WILL INCREASE OR DECREASE VOLUME OF THE AUDIO.**

**SLIDING THE SWITCH TO "OFF" PUTS ITEM IN TRY ME BUTTON OR STEP PAD ACTIVATION MODE.**

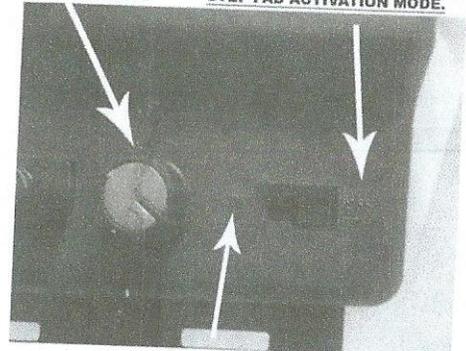

**SLIDING THE SWITCH TO "ON" PUTS ITEM ON SOUND SENSOR ACTIVATION MODE.**

**MORBID**  
**ENTERPRISES**  
[www.morbidenterprises.com](http://www.morbidenterprises.com)